


## Clearing out Air Motor Valves

*If your Edson Single Diaphragm Pump has an Air Motor Drive System, it may become clogged and hinder the pump from working. To clear the Air Motor Valves, you need to press one of the two release buttons located on the side of the pump.*



*You can see the first release valve looking down from the top of the pump and the second by looking upward from the bottom of the pump. With one pen or paper clip (something small enough to press in the button), press one of the release valves, clearing the Air Motor and allowing the pump to be operational again!*

### Top View

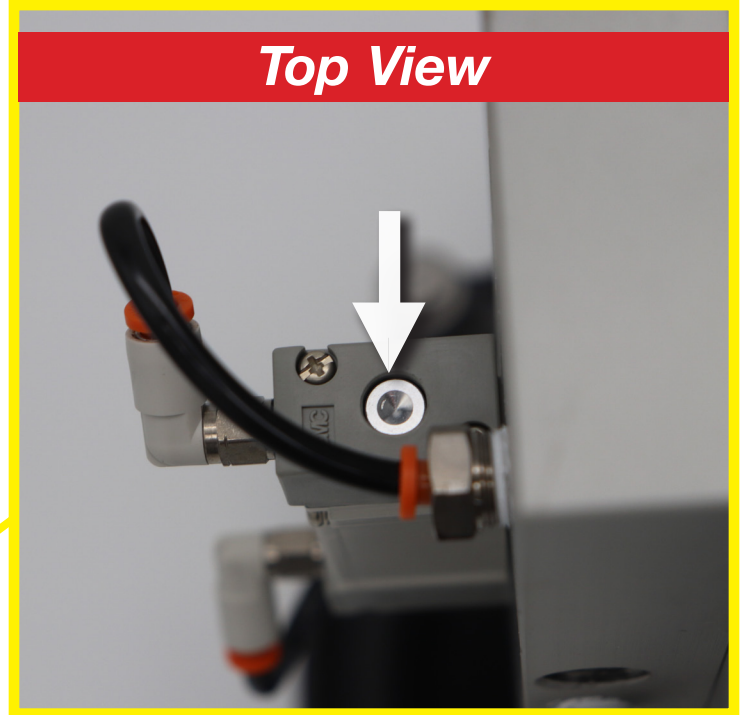

### Bottom View

