

Assembly Instructions Recessed Hydrant Mount 265PL And Hydrant 270PV

Tools Needed For Assembly:

9/16 Box Wrench or Socket
7/16 Box Wrench or Socket
Phillips Head Screw Driver



Hydrant Container Cover

Plastic Bag Of Cover Hardware

Hydrant Container



From 270PV Package:

Ball Valve

Female Camlock




Plug and Lanyard From 270PV Package

1. Remove nuts & washers from ball valve.
2. Place Hydrant Mount as shown.
3. Replace & tighten nuts & washers.
Do not over tighten the nuts or the ball valve will be hard to open and close.
4. Screw female camlock and plug assembly into ball valve.



5. Connect the lanyard to the cover using the 1/4" flat head machine screw, nut and washer.
6. Connect the other end of the lanyard to the side of the container using the 1/4" round head machine screw, nut and washer.
Keep the nut to the inside.



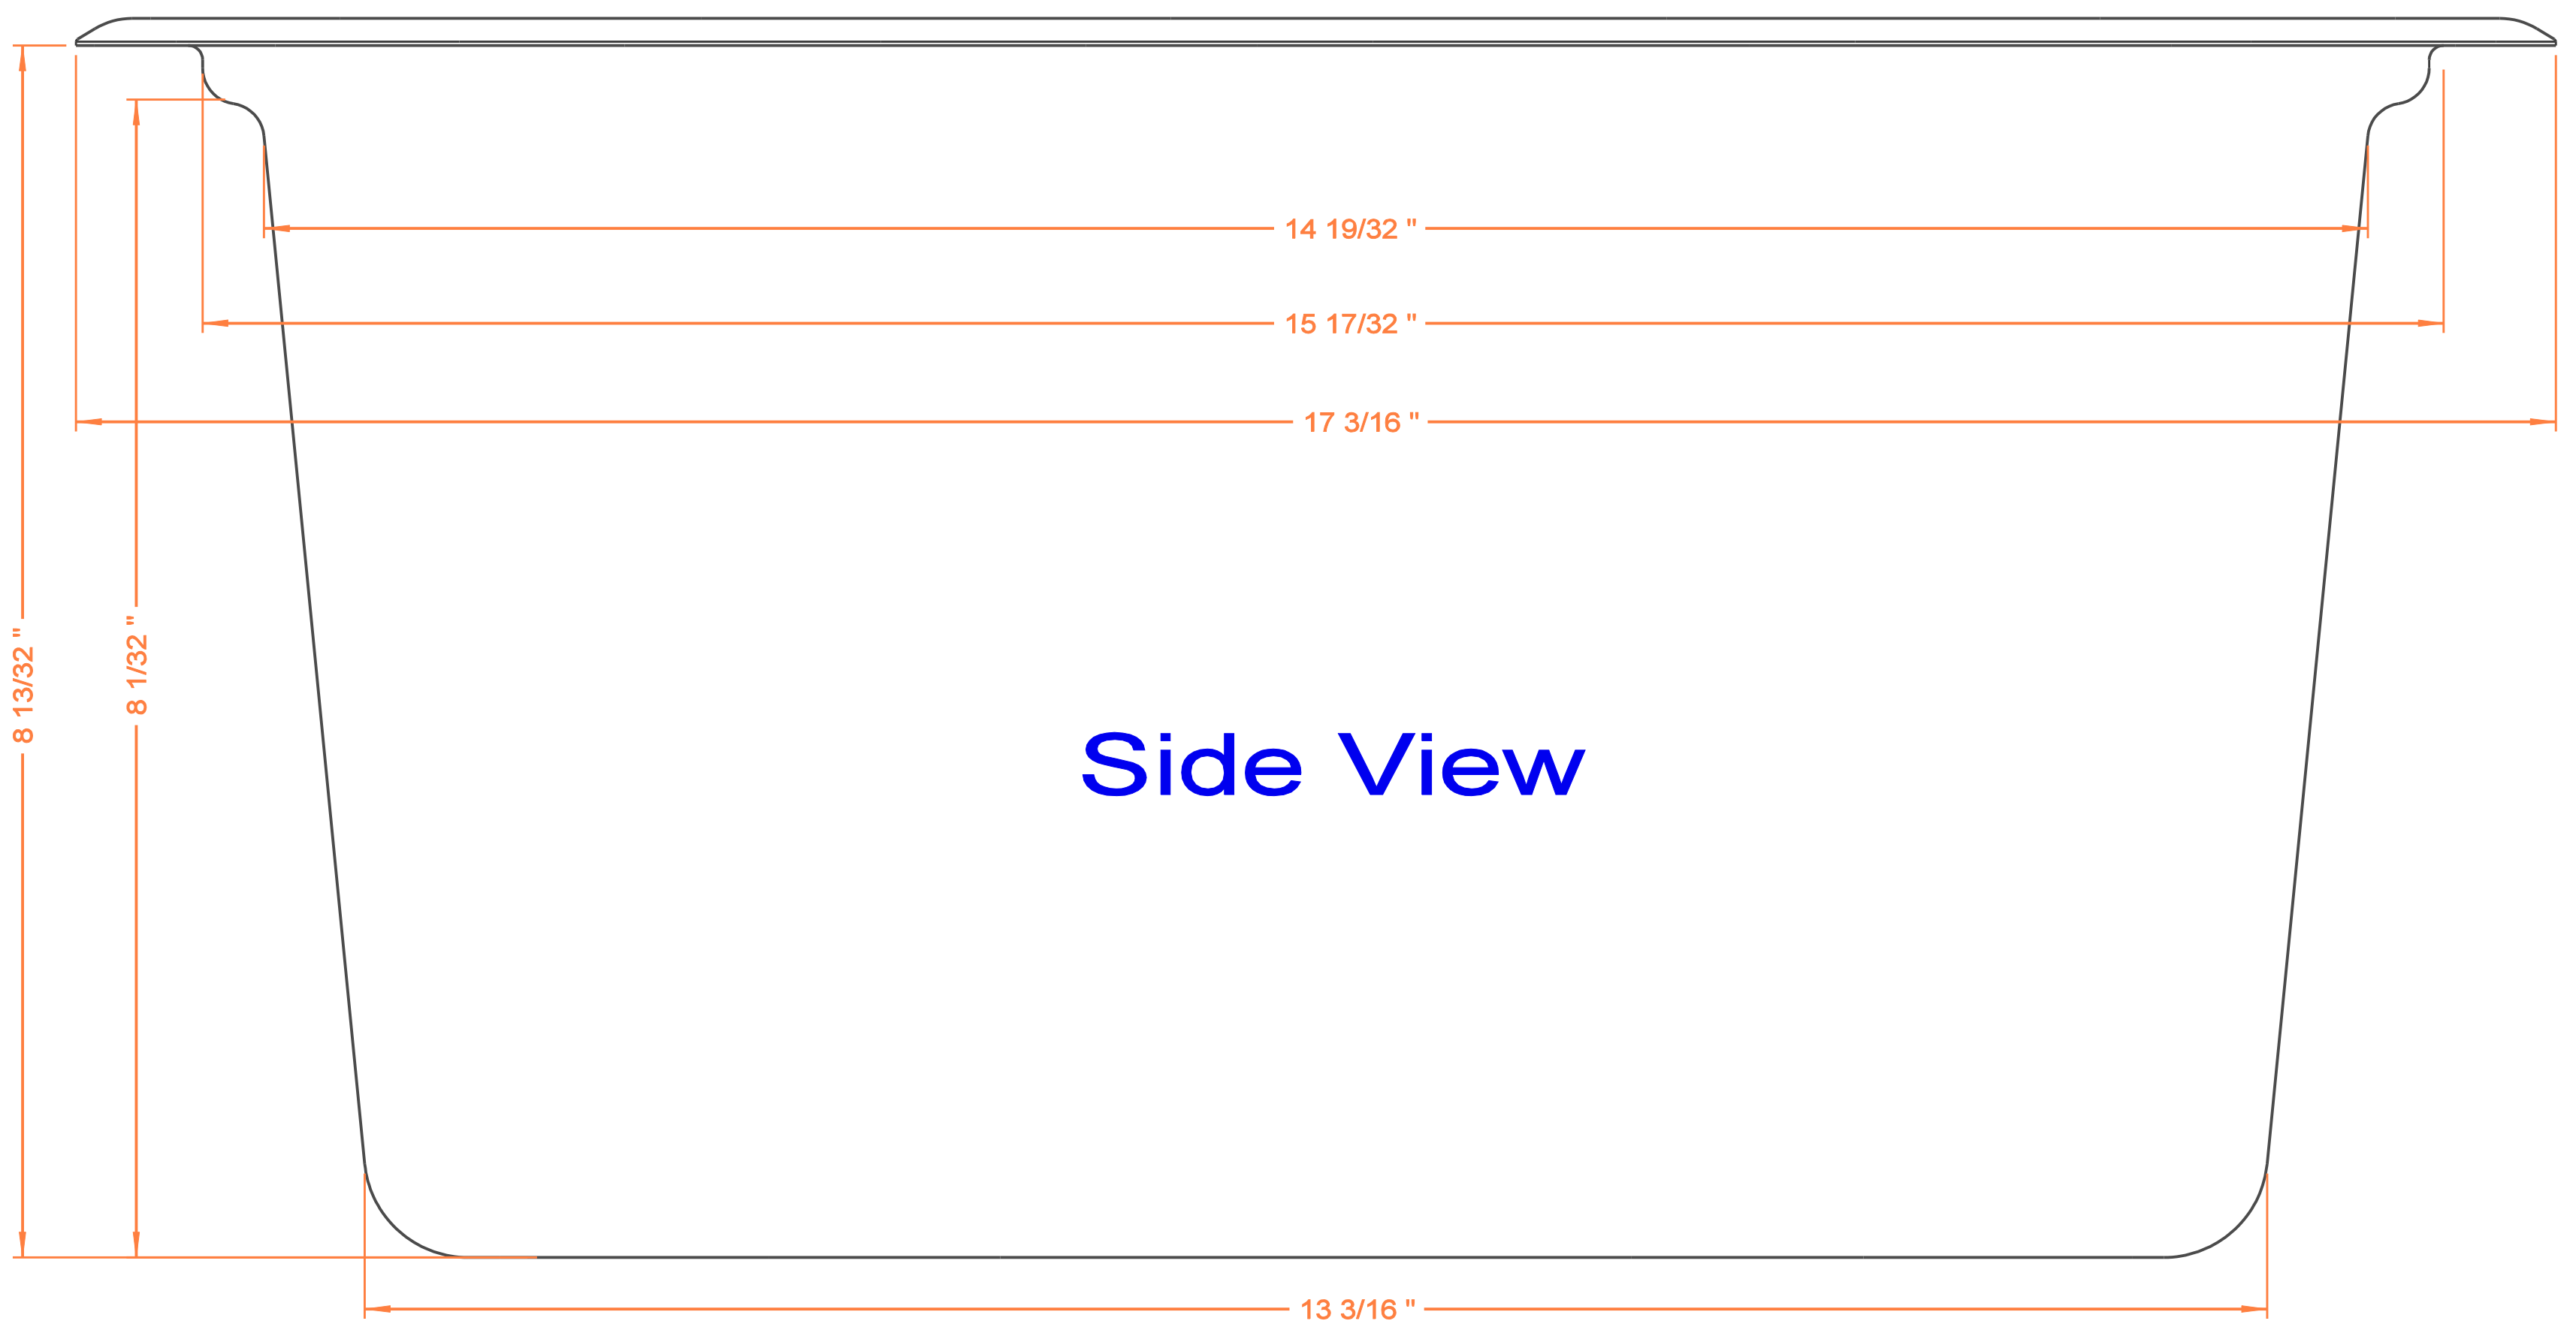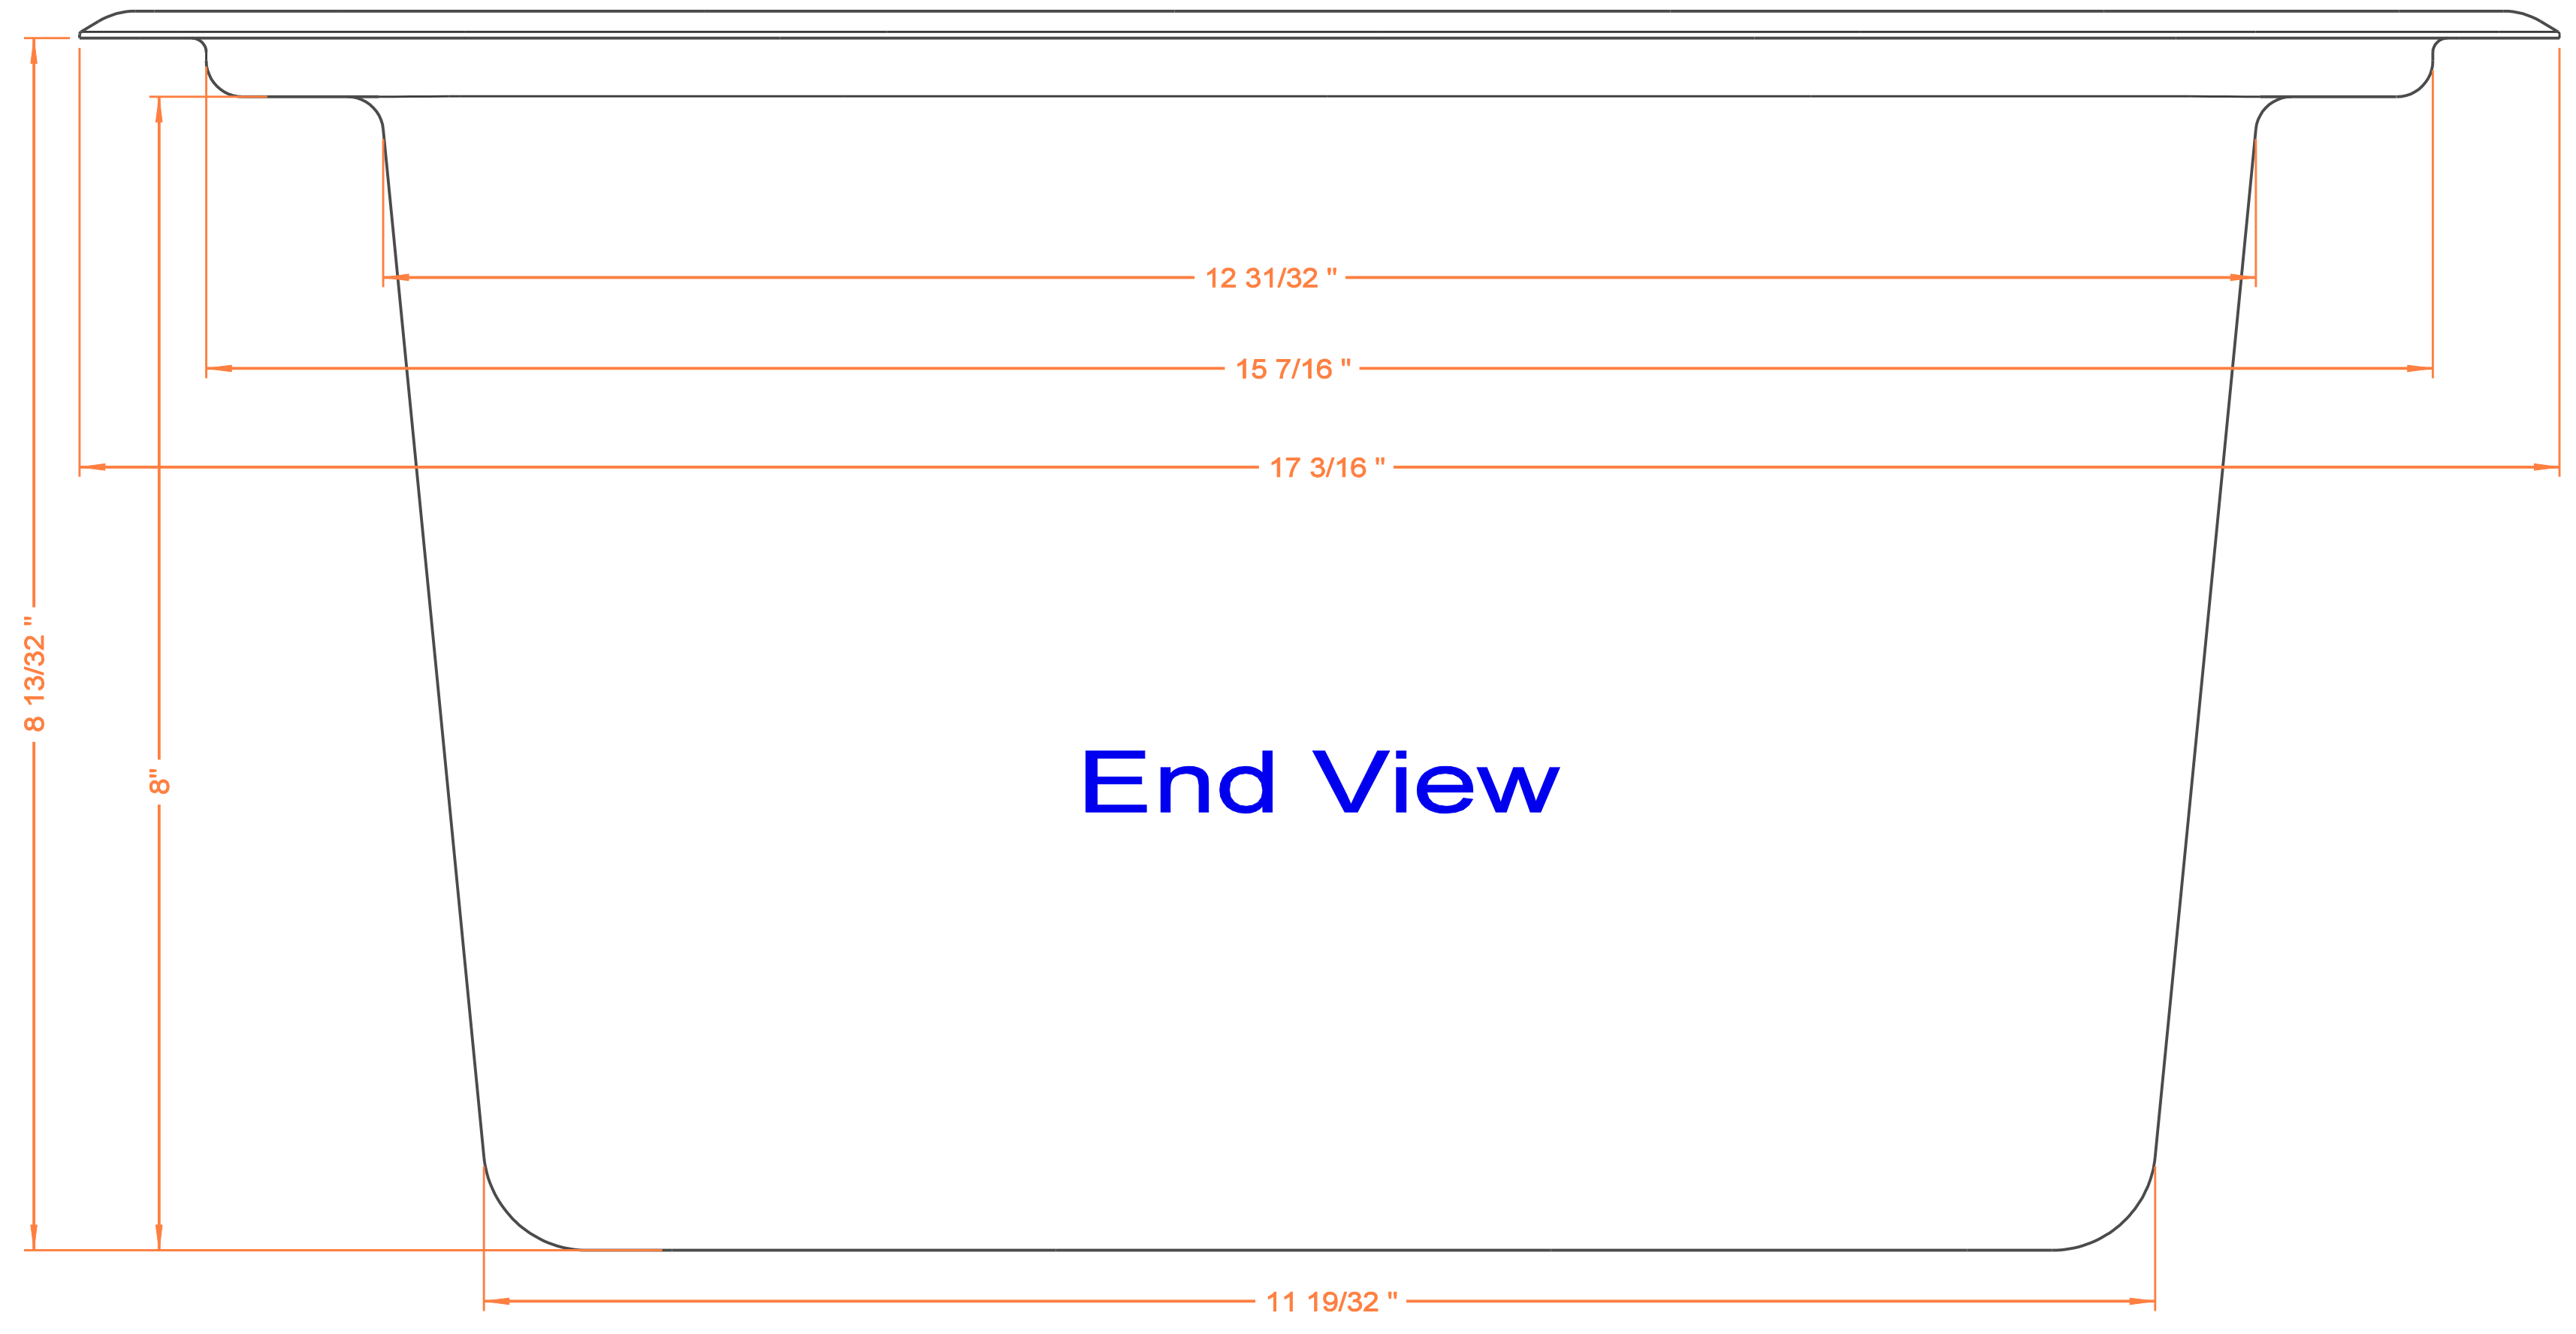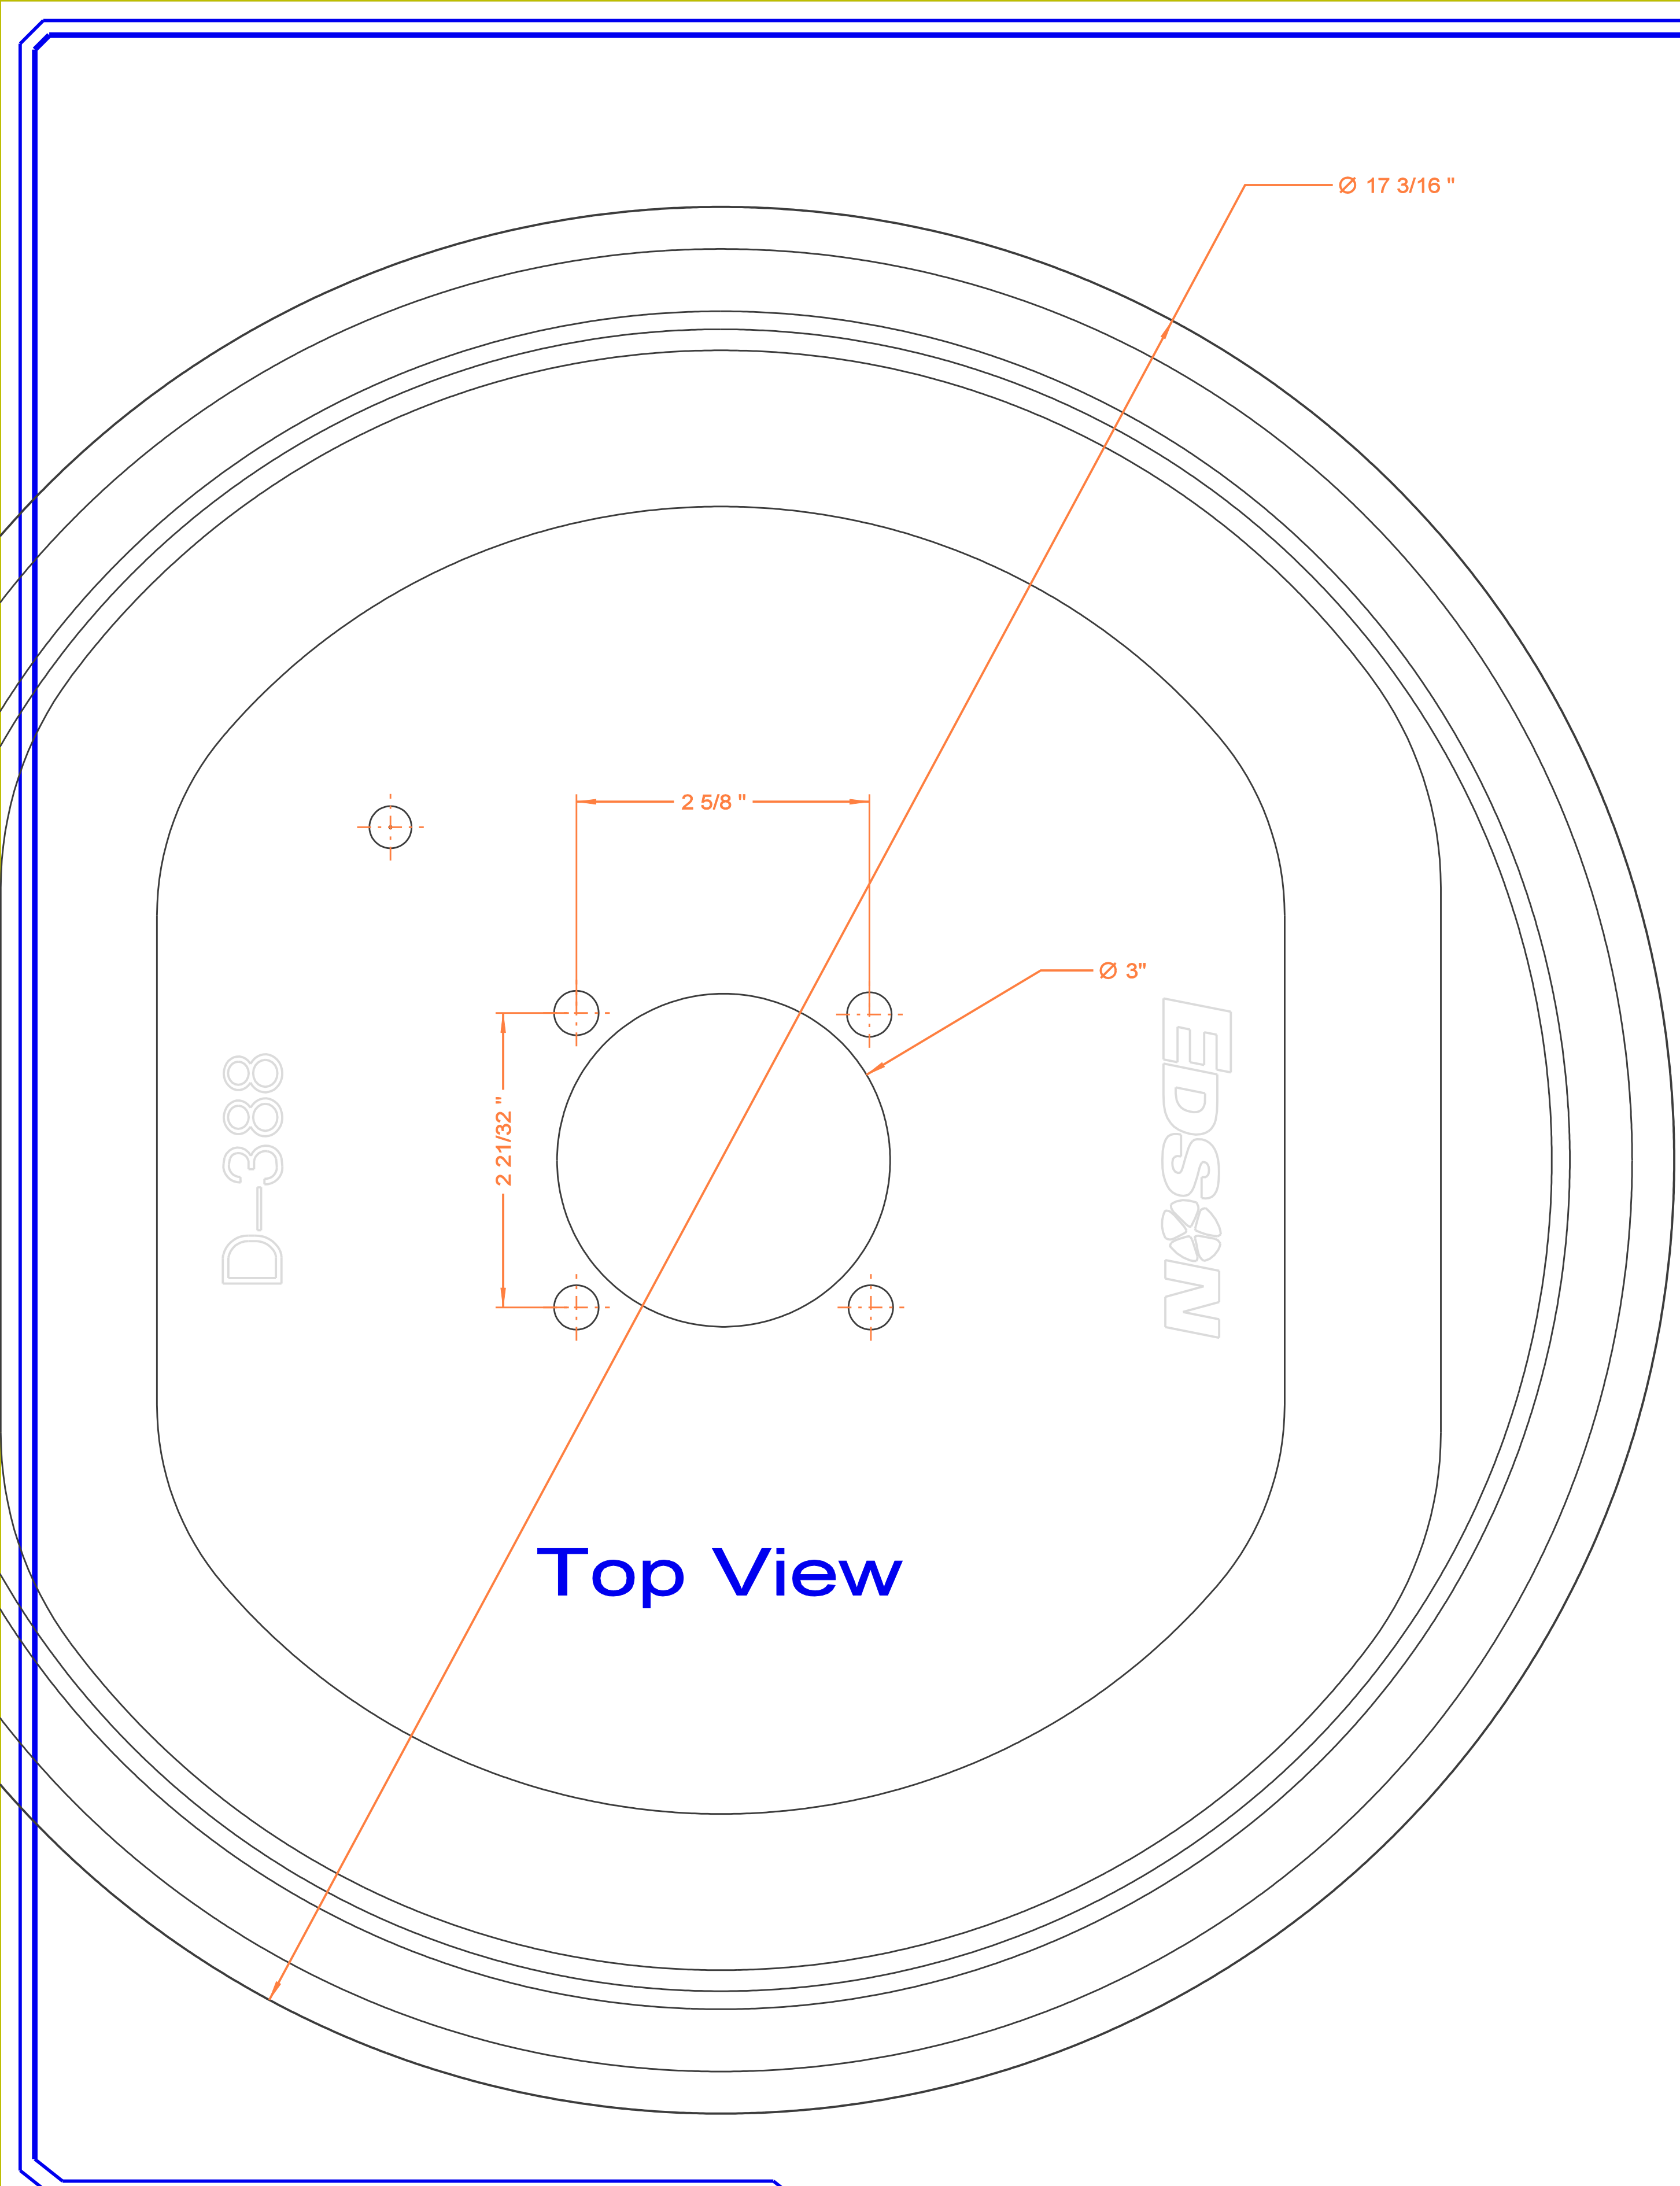

TOLERANCES Fractional Dimensions: +/- 1/64"
 Three place Decimals: +/- .001" Two place Decimals: +/- .010"

EDSON EDSON Corporation
 146 Duchaine Boulevard
 New Bedford, MA 02745-1292
 (508) 995-9711 Fax: (508) 995-5021

Deck Hydrant Layout

All Designs are Confidential and remain the property of the Edson Corporation. Any use of Edson's proprietary information must be approved by Edson International. Violations will be prosecuted under the 'Economic Espionage Act of 1996'

First Issue 3/30/10

Scale FULL Size	Drawn By RWB	Drawing Number D-389
Date March 22 nd, 2010		